

ENDORSED BY INSURANCE COMPANIES WORLDWIDE

Your best defense against water damage...

The Leak Stopper & Filter Life Monitor is your best means to prevent water damage and the inconvenience associated with it.

When moisture is detected by the metal contacts the alarm is triggered and the unit activates the solenoid valve to shut off the water supply to the appliance. The Leak Warning indicator will continuously blink blue. The alarm will continue to sound until the unit is manually reset.

After resolving the leak, press and hold the reset button for 4 seconds - the unit will then generate a long "beep" sound and reset the solenoid valve.

ULTRA-SENSITIVE SENSOR


Warns against the first sign of leaking

QUALITY MANUFACTURE

Created by specialists in water control

CARTRIDGE MAINTENANCE

Indicates when to change cartridges

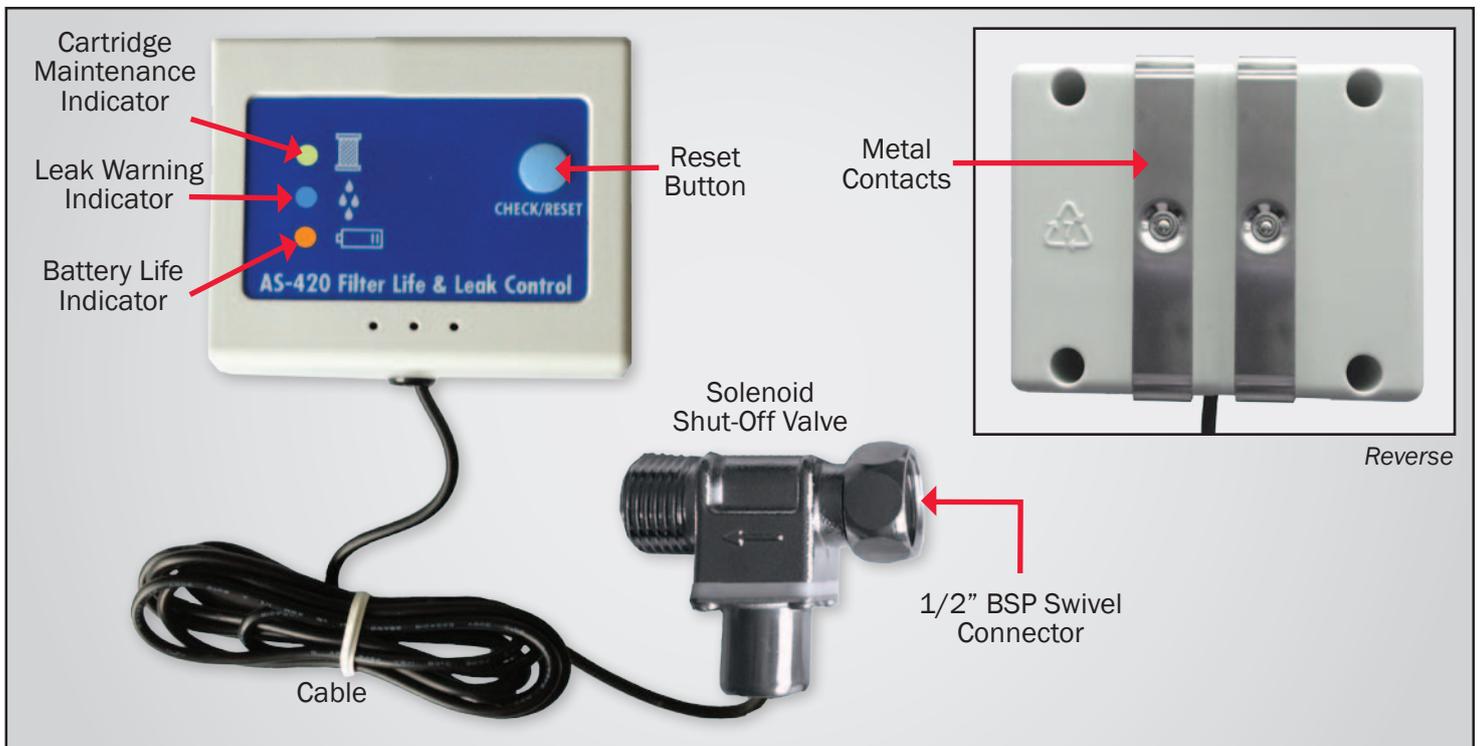

Have peace of mind knowing when to change your water filter cartridges. Depending on the life remaining within your filter cartridge the Cartridge Maintenance Indicator will signal a different coloured light. An alarm will also trigger when time is running short for your cartridges to be replaced.

! When the battery power of your unit is low, the water supply will automatically be shut off. The Battery Life Indicator will blink yellow and generate a beep sound every 2 seconds to notify the user. Replacing the battery will release the alert and turn on the water supply.

Specifications

Operating Voltage	9V DC Alkaline Battery
Connection	1/2" BSP Male & Female
Cable Length	1.5 M
Maximum Pressure	approx. 125 PSI

Features

- Water leak control with alarm & auto shut off
- Low Battery Power Alert
- Colour coded lights indicating filter life status
- Easy installation and operation

Step by Step Installation

- 1 Shut Off the Water Supply** - Locate the water shut off valve (ministop valve, see **Diagram 1**) for the cold water feed line.

Close the cold water shut off valve/ministop valve. Turn on the cold water faucet to ensure that the line is completely shut off and drained. (If there is no cold water shut off valve located under the sink, then turn off the main water supply at the entry to the residence).

- 2 Install the Solenoid Shut-Off Valve** - Unscrew your plumbing assembly (compression tee, see **Diagram 1**) from the shut off/ministop valve. In it's place, screw the solenoid valve onto the shut off/ministop valve. The plumbing assembly can then be reattached to the male thread of the solenoid valve (see **Diagram 1**).

- 3** Install the battery provided into the control unit.

NOTE: Once the battery is successfully installed the unit will generate a long "beep" sound and all the indicating lights will turn on for approximately 3 seconds. The Cartridge Maintenance indicator will blink several times.

- 4** Place the control unit at the lowest position possible close to your appliance/system. Ensure the metal contacts are face down, touching the area susceptible to water leakage.

NOTE: If the surface where the unit is to be placed is made of metal - place a piece of paper or cloth between the unit and the surface.

Your unit is now operational and will begin monitoring leaks and the life of your filter cartridge(s).

Diagram 1 - Plumbing Assembly


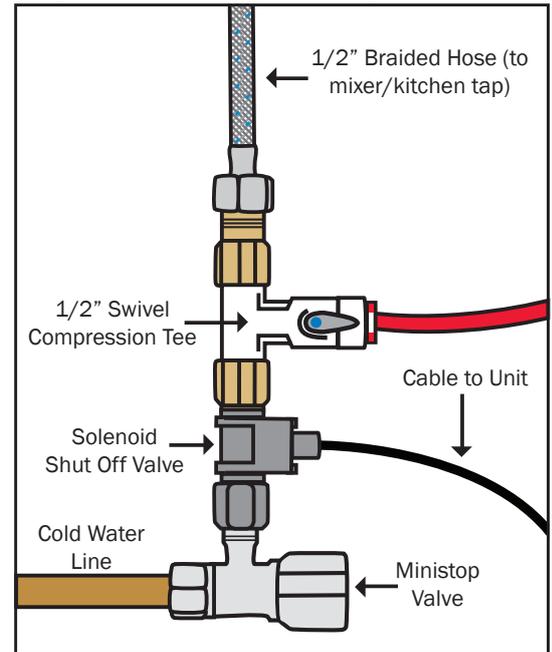


Diagram 2 - Installation Setup

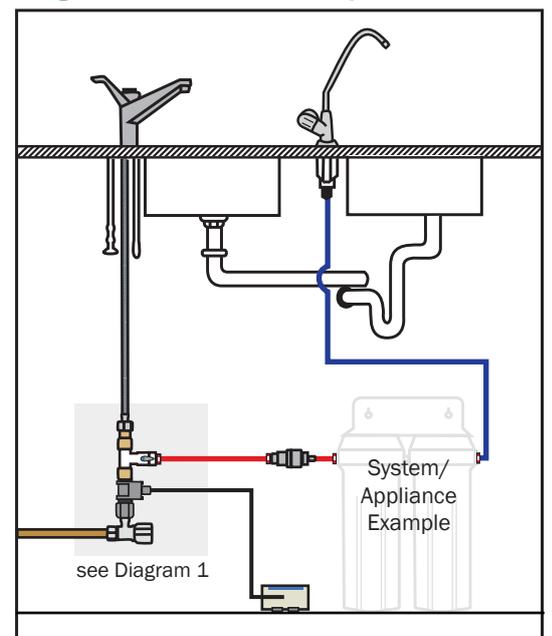

Monitoring Filter Life

On the unit, simply click the 'CHECK' button. The light will then display for 3 seconds - it's colour indicating the life status of your filter cartridge.

To reset the filter life - hold this button for 4 seconds, the unit will then reset to the original setting of days.

Colour	Remaining Days
Green	> 14 days
Orange	1 - 14 days
Red	= < 0 day

As your filter nears the end of it's recommended lifespan the unit will generate an alarm and the indicating light will continuously blink.

Under 14 Days - 5 "beep-beep" sounds and an orange light will blink every 15 minutes.

0 days - 5 "beep-beep-beep" sounds and a red light will blink every 15 minutes.